

LUCKYDOG

recreation

in pursuit of play™



MAINTENANCE CHECKLIST

The following are some danger points that need to be checked periodically. Using simple hand tools and the tools provided with your equipment will help you maintain your playground.

- 🐾 Visible cracking, bending, warping, rusting, breaking, or excessive wear of any component or part.
- 🐾 Deformation of open hooks, rings, links, etc.
- 🐾 Worn swing hangers, “S” hooks, or chains.
- 🐾 Missing, worn, cracked, or jagged swing seats.
- 🐾 Broken supports or anchors.
- 🐾 Concrete footing exposed, cracked, or loose in ground.
- 🐾 Sharp edges or points.
- 🐾 Exposed ends of pipes that should be covered by plugs or caps.
- 🐾 Protruding bolt ends that do not have smooth finished caps or covers.
- 🐾 Loose, worn, or rusted bolts, nuts, or other fasteners.
- 🐾 Splintered wood.
- 🐾 Lack of lubrication on moving parts.
- 🐾 Worn or squeaky bearings.
- 🐾 Broken or missing rails, steps, rungs, or seats.
- 🐾 Surfacing material worn or scattered.
- 🐾 Swing chain wrapped around horizontal swing beams.
- 🐾 Chipped or peeling paint.
- 🐾 Broken glass, trash, or foreign objects within or on the play equipment.
- 🐾 Pinched or crushed points (exposed mechanisms, junctions, or moving components).
- 🐾 Loose or twisting climbing rungs.

1.800.388.2196 play@luckydrec.com www.luckydogrecreation.com